



Product registration  
Thank you for purchasing an Acoustic Research product. We pride ourselves on the quality and reliability of all our electronic products, but if you ever need service or have a question our customer service staff stands ready to help. Contact us at [www.acoustic-research.com](http://www.acoustic-research.com). **PURCHASE REGISTRATION:** Registering Online will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. **Register Online at: [WWW.ACOUSTIC-RESEARCH.COM](http://WWW.ACOUSTIC-RESEARCH.COM). Click on Product Registration and Fill Out the Brief Questionnaire.**

Enregistregistro del productotrement du produit  
Gracias por comprar un producto Acoustic Research. Nos enorgullece la calidad y fiabilidad de todos nuestros productos electrónicos, pero si alguna vez necesita servicios técnicos o si tiene alguna pregunta nuestro personal de atención al cliente está a su disposición para ayudarle. Comuníquese con nosotros en [www.acoustic-research.com](http://www.acoustic-research.com). **REGISTRO DE COMPRA:** El registro en línea nos permitirá comunicarnos con usted en el caso de tener que enviarle algún aviso de seguridad en virtud de la Ley Federal de Seguridad del Consumidor. **Registre el producto en línea en: [WWW.ACOUSTIC-RESEARCH.COM](http://WWW.ACOUSTIC-RESEARCH.COM). Haga clic en Registro del producto y responda al cuestionario.**

Enregistrement du produit  
Merci d'avoir acheté un produit Acoustic Research. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur [www.acoustic-research.com](http://www.acoustic-research.com). **ENREGISTREMENT D'ACHAT:** Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi fédérale de protection du consommateur). **Enregistrez votre produit en ligne sur: [WWW.ACOUSTIC-RESEARCH.COM](http://WWW.ACOUSTIC-RESEARCH.COM). Cliquez sur Enregistrement produit et remplissez le court questionnaire.**

EN/E/F

It is important to read this user manual prior to using your new product for the first time.  
Es importante leer este manual antes de usar por vez primera su equipo.  
Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.



## Regulatory Information

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.


**RF Exposure Warning**  
This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions

## General controls

Top view



Right view

 

- (1) **- / + button**
- Press to adjust volume on the speaker. You may also need to adjust the volume on your device.
- (2) **Skip reverse**
- Press to skip to previous track.
- (3) **Play/Pause/Call button**
- Press to pause or resume audio playback. When there is an

incoming phone call, press to answer or end call.


- (4) **Skip forward button**
- Press to skip to the next track.

- (5) **Pair button and Pair indicator**
- Press and hold for 3 seconds to activate pairing mode. If the speaker is already connected and you would like to connect to a different device, press and hold for 3 seconds to break the current connection and initiate pairing.


Fast flash in blue	Ready for pairing
Very slow flash in blue	In Standby mode

## user manual guide de l'utilisateur manual de usuario

 ARS140

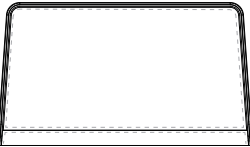

## English

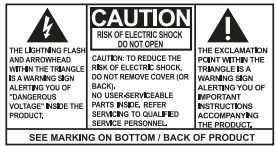 

**WARNING:** TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.

caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart Warning

**ADDITIONAL SAFETY INFORMATION**

- The AC adaptor supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers that came with your product or that are listed in the user manual.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, or in a bookcase or cabinet that may prevent air flow through vent openings.

## Specification

- AVRCP (Audio / Video Remote Control Profile) v1.0
- HF (Hands-Free Profile) v1.5
- HS (Headset Profile) v1.1

**Operating Range :**  
10 meters *Bluetooth* standard

**Frequency :**  
2.4 GHz

- Battery and Battery Life :**
- Battery type : Lithium polymer ion battery
  - Music playing time (maximum volume level) : 5 hours
  - Music playing time (medium volume) : 15 hours
  - Charging time : 5 hours
- Supported *Bluetooth* Profiles :**
- A2DP 1.0 (Advanced Audio Distribution Profile)

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc. and any use of such marks by VOXX Accessories Corporation is under license. Other trademarks and trade names are those of their respective owners.

- Size and Weight :**
- Height : 5.51 inches
  - Width : 9.80 inches
  - Depth : 1.89 inches
  - Weight : 1.45 lbs

- Accessories :**
- 3.5 mm stereo jack cable
  - Micro USB cable
  - Carry strap
  - Power adapter

## Introduction

The ARS140 is a portable, wireless stereo speaker featuring a portable design and compact footprint.

Users can stream music wirelessly from any smartphone, cell phone, tablet, computer, laptop or mp3 player supporting *Bluetooth* AVRCP, A2DP or HFP.

The integrated rechargeable battery ensures 5 hours of non-stop, maximum-volume music, and up to 15 hours of moderately played melodies.

The ARS140 comes with a 3.5 mm stereo jack cable for devices that do not support *Bluetooth*.

## Charging

**Plugging in for power**  
Connect the supplied power adapter to the DC 5V on the right of the ARS140, and connect the other end to a convenient wall outlet.

The Charge indicator on the right of the ARS140 will turn solid red while the speaker is charging. It turns solid green when the speaker is fully charged.

When the battery is low, the charge indicator will blink.

**Important battery information**  
Warning: Your product contains a battery and charging system which is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in a closed automobile or the trunk of an automobile where temperatures may exceed 50°C may result in permanent battery damage, fire, or explosion. Please remove your product from the automobile when you exit, do not place your product in the trunk of your automobile, and do not leave your product in any location where temperatures may exceed 50°C.

**Ecology**  
Your product must be disposed of properly according to local laws and regulations. Because this product

contains a battery, the product must be disposed of separately from the household waste.

**Precautions for the unit**

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

## Regulatory Information

**FCC Information**  
**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

## Turning On/Off

Power On : Press the button on the top of the ARS140. A power on beep tone will be heard and the Pair indicator will blink.

Power Off : Press the button on the top of the ARS140.



**Note:** In addition to using the supplied power adapter, you may also charge the speaker using the provided Micro USB cable with any USB compatible charging port.  
**Important:**  
The battery should be fully charged prior to first use. Once the battery is fully discharged, immediately recharge (regardless of wether you plan to use battery or not) in order to maximize battery time. If you plan not to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least once every two months to maintain the battery in optimum condition.

## Warranty information

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or

the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**Recommendations before returning your product for a warranty claim:**

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned

with factory default settings. Consumer will be responsible to restore any personal preference settings.

**Audiovox Return Centre**  
**Attn: Service Department.**  
**150 Marcus Blvd.**  
**Hauppauge N.Y. 11788**

1-800-645-4994

For Canada Customers, please ship to:  
Audiovox Return Centre  
c/o Genco  
6685 Kennedy Road,  
Unit#3, Door 14,  
Mississauga, Ontario  
L5T 3A5

## Pairing

Pair the ARS140 with your phone/ device to create an audio streaming link between the two devices. Your devices must be paired before music can be played.



**Important :** Make sure that your phone/device supports *Bluetooth* A2DP\* (Advanced Audio Distribution Profile) before proceeding.  
\*A2DP (Advanced Audio Distribution Profile) is a technology enabling streaming stereo sound from an audio source (phone, PC, laptop, tablet, mp3 player) to a stereo speaker or headset via *Bluetooth*. To do so, both devices must support this profile.

- If the ARS140 is off, press the button to turn it on.
- If this is the first time you are turning on ARS140, the **Pair indicator** blinks in blue rapidly. This indicates that ARS140 is ready to be paired. If the **Pair indicator** does not blink rapidly, press and hold the **Pair** button for 3 seconds.
- While the ARS140 is in pairing mode, select AR FASHION SPKR from the list of *Bluetooth* devices of your phone.
- If your phone asks for a password/ pin code, enter 0000 and press **OK**.
- Upon successful pairing, the ARS140 will beep once. It is now ready to use with your phone.

## Reconnecting

When you turn it on, the ARS140 reconnects automatically with the last paired device. When you leave the *Bluetooth* operating range with the ARS140 turned ON, it disconnects. When you come back into the *Bluetooth* operating range, press the **Pair** button to reconnect to the last paired device. The ARS140 will beep once it has been successfully repaired.

## Streaming music

**Important:** The ARS140 needs to be paired with your *Bluetooth* A2DP phone/ device before you can stream music to the speaker. Please refer to the Pairing section for details on how to pair with the ARS140.



- Go to your phone's music player and play a track by pressing "Play" . If the ARS140 is connected, the music will be heard directly in the speaker. See your phone's manual if needed.
- To adjust the volume of your audio: Use the - and + buttons on top of the speaker. You can also use the volume controls on your phone.

## Using the speakerphone

This speaker has a built-in microphone on top of the speaker, so you can use it for phone calls as well as music. Your phone will ring through the speaker when you're receiving a call. To answer/end the call: Press the button on top of the speaker.



**Note:** Make sure you're close enough to the speaker's built-in microphone so that the other person can hear you!  
**Important:**  
Not all phones support playback control and phone answer/end control. Check your phone's user manual for more information if you're having trouble with these functions.

## Auxiliary source

- Plug one end of the supplied 3.5 mm stereo jack cable into the AUX jack and the other end into the output of your music player. The speaker automatically switches to the AUX audio and the Pair indicator will turn white.
- Press "Play" on your music player to stream music directly via the ARS140 and use the controls on your music player directly.
- To listen to *Bluetooth* audio again, unplug the cable from the speaker's AUX jack.

## Warranty information

**12 Month Limited Warranty Applies to AR Audio Systems**

VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill

of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.